




McGAUGHYS
S U S P E N S I O N P A R T S

559-226-8196
4603 E. VINE AVE.
FRESNO, CA 93725
www.mcgaughys.com

**2011-2024 GM 2500/3500
REAR SHIM KIT**

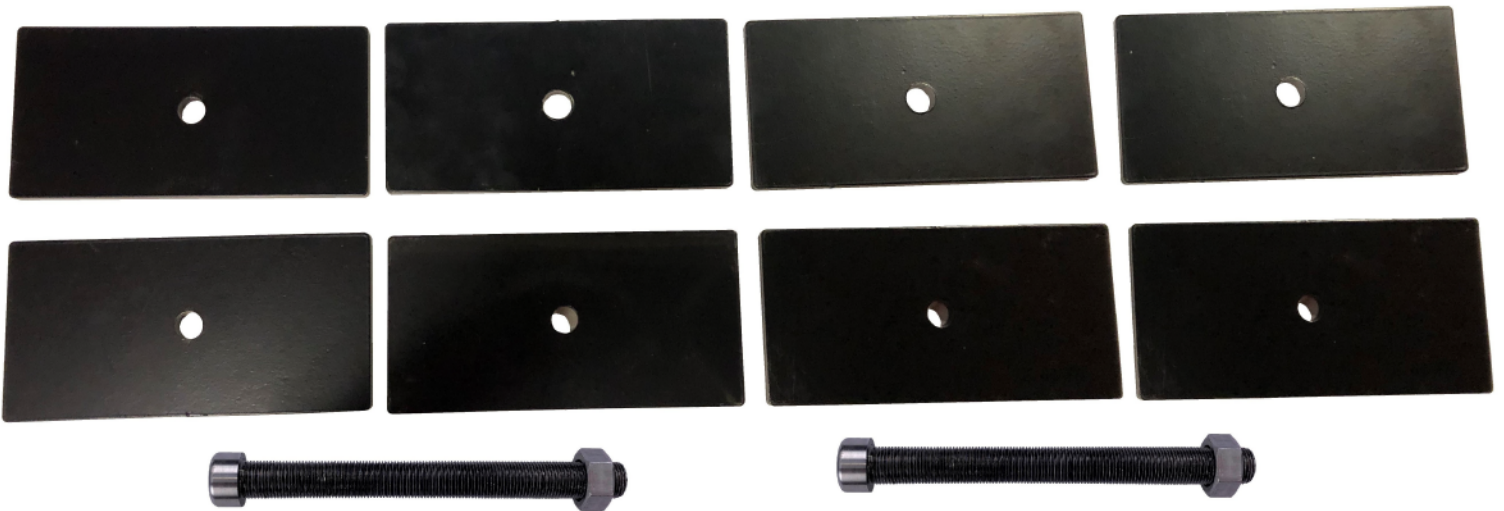

INCLUDES: (4) SHIMS & (2) CENTER PINS

To install, clamp the factory leaf spring pack to keep intact.

Remove the factory center pin and discard.

You will install the shims at the bottom of the factory leaf pack, so that they sit on top of the lift block. Use the new provided center pin. Each shim will give you 1/4" of lift.

